




Setpl: Insert the fastener into the classis after tearing off the yellow protection was of the classis, the fastener and the code wheel.

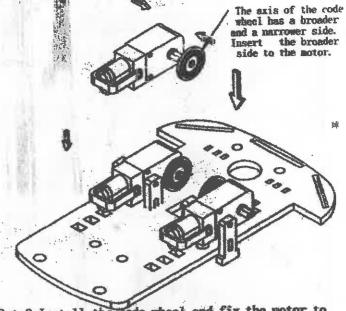


Setp2: Install the code wheel and fix the motor to the chassis. (Attention, the copper sheet of the leading wire of the motor should face outward, the same side of the wheel)

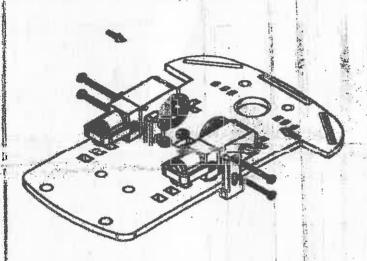

Setp3:Fix the motor to the chassis, then insert and tighten the screws.

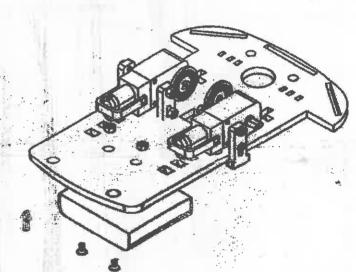

Setp4: Insert the screws and fix the battery container.

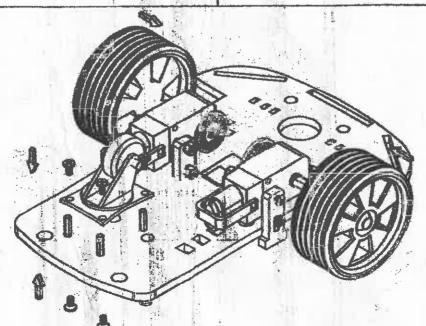

Setp5: Insert the spacer and tighten the 8 screws to fix the hammer caster. Hold tight and insert the motor (protection fastener) to the wheel. Installation completed.

